



# How to set up your Marmot Tungsten UL Hatchback 2P/3P Fly


\*Tungsten UL 2P/3P Tent Purchased Separately\*

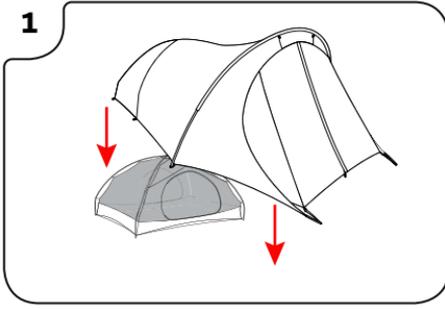


1 ONCE TUNGSTEN UL TENT IS SET-UP AND STAKED DOWN - PULL HATCHBACK FLY OVER TENT BODY

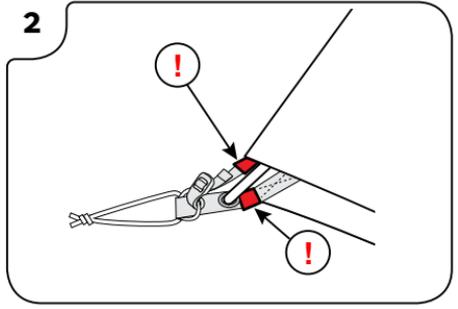


2 LINE UP RED TABS ON HATCHBACK FLY WITH RED TABS ON FRONT CORNERS OF TENT

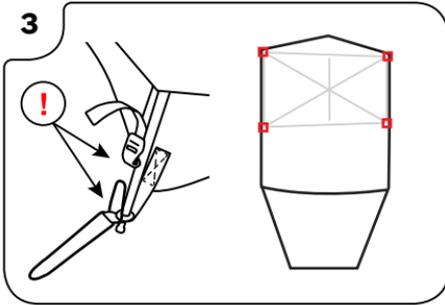


3 ATTACH THE HATCHBACK FLY TO THE FOUR CORNERS OF THE TENT

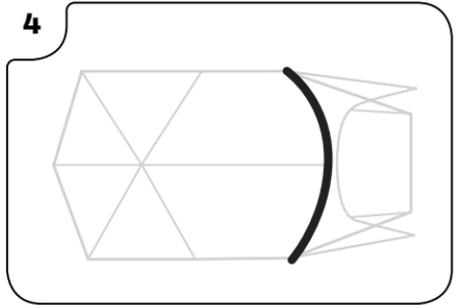

4 CONNECT POLES LEAVING NO SPACE BETWEEN SECTIONS AND INSERT POLE INTO POLE SLEEVE

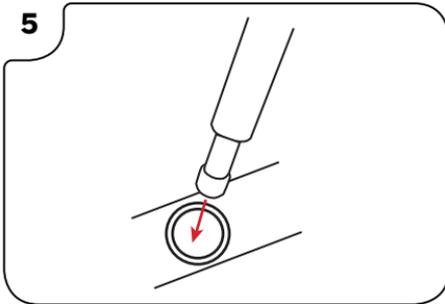


5 INSERT POLE TIPS INTO GROMMETS

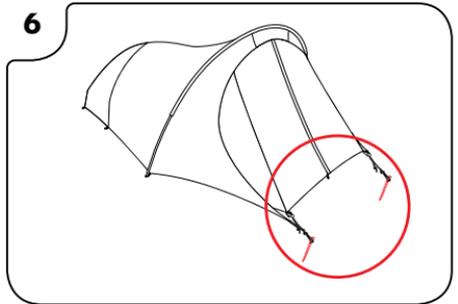


6 STAKE OUT VESTIBULES

## OPTIONAL

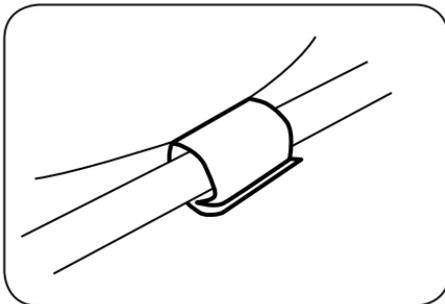

LOOK UNDER FLY - VELCRO FLY TO TENT POLES

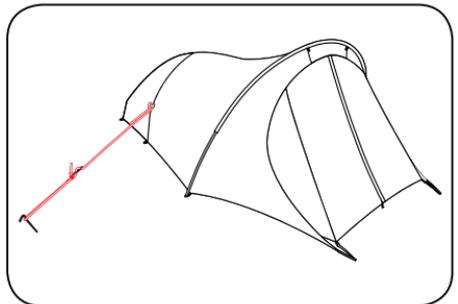

GUY OUT IN HIGH WIND

For additional information about your Marmot® tent please visit [www.marmot.com](http://www.marmot.com)